Quinti®

Advanced direction armchair from Quinti collection with tubular structure in chromed metal.

Base

Four bases are available:

- 1. In aluminum 670 mm, "Loop" type
- 2. Cantilever structure, chromed sled base
- 3. 'Star' Base 4 spokes on feet

4. 2/3/4 seater bench with aluminum trestle legs and grey painted support beam 40x80 mm section.

Casters

Double tread diam 60 mm, standard or rubberized, both can be free [standard] or self-braking. The feet in polyamide are interchangeable to the casters with the same locking pin at the base.

Elevation

All Quinti's gas columns are in accordance with the DIN 4550 norm and they exceed the fourth level.

Mechanics

M5 the standard configuration of the chair supposes a tilt single lever mechanism with gas command, height and block in operative position. It has a wheel for the variation of the tilt rigidity. The main body is entirely made out of die-cast aluminum.

M4 /M3 the point of rotation of this mechanism is advanced. The blocking lever allows the blocking process in 3 positions with a backstop system of the seat. It has a wheel for the variation of the tilting rigidity. The main body is entirely made out of shiny or black die-cast aluminum.

3. M10 [optional] Harmonic mechanism, which guarantees a permanent tilt of the seat and gas elevation.

4. M8/ M8F swivel plate with or without base elevation

Armrests

Couplet of armrests in chromed or black metal. It is possible to apply a cover for the armrests as accessory.



For the bench, the armrest can be applied to the die-cast aluminum beam, at the end or among the seatings.

Seat & Backrests

Seat and backrest are made up of a monocoque in chromed square tubular 25x25, inside this a self-supporting structure is integrated through two steel tie-rods. Both in the high and short version it is available with standard

dimensions and XL.

Upholsters


The upholsters have a density of 60, with a 1.5 cm thickness coverd with stitch in horizontal stripes and applied with Velcro on a soft 1,3 mm thick Eurolene support.







DIMENSIONS

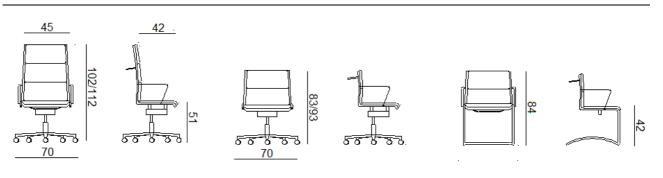



COATINGS

BIO-EXPO

CATEGORY 2 300 gr/mt2 100% Propitex FR batteriosattico Classe 1UNI EN ISO 354:2003 100.000 +/- 10% Maltindale rubs

EXTREME

CATEGORY 2 350 gr/mtl 100% Xtreme FR Classe , EN 1021-1/2 100.000 +/- 10% Maltindale rubs

LASER

CATEGORY 2 560 gr/mtl 100% Poliestere FR Classe 1 80.000+/- 10% Maltindale rubs

LEATHERETTE

CATEGORY 2 630 gr/mt2 83% PVC, 17% Syntetic ISO 379-DIN75200-CSERF4/83 10% Maltindale rubs

ERA

CATEGORY 3 448 gr/mtl 100% Trevira CS Classe 1UNI EN ISO 354:2003 100.000 +/- 10% Maltindale rubs

LASER PLUS

CATEGORY 3 630 gr/mtl 100% Poliestere FR Trevira Classe1 , 4.000 +/- Maltindale rubs

SOUL LEATHERETTE CATEGORY 3

760 gr/mt2 Surface 100% POLIURETANO, Base Poliestere 85%,17% Cotton EN1021-1/BS5852 PART 1 >100.000 EN ISO 5470-2

Quinti Sedute Srl Parco il Granaio 21/22_ CESA [Ar] Partita IVA 02138850512 T. +39 057 566 970 F. +39 057 566 836 www.quinti.com - info@quinti.com

MELANGE

CATEGORY 3 390 g/lin.m 100% Trevira CS Classe 1 80.000 +/- 10% Maltindale rubs

JET

CATEGORY 3 365+/- 5% g/lin.m 100% Poliestere FR Classe 1 80.000+/- 10% Maltindale rubs

PRO SYSTEM LEATHERETTE CATEGORY 3 710 gr/mt2 Surface 93% PVC Base Poliestere 28% CLASSE1

CLASSE1 100.000 RUBS

WOOL CATEGORY 5 500 gr/mt2 75% Wool, 25% poliammide Classe 1

100.000 Maltindale rubs

LEATHER CATEGORY 5/6 620 g/lin.m 100% Bovine leather Classe 1, EN 1021-1/2

PIED POULE CATEGORY 6

550 g/lin.m 66% Cotton, 34% Poliestere 35.000 % Maltindale rubs

EUROPOST 2 CATEGORY 6

710 g/lin.m 63% PU, 16% CO, 21% PL Ini1975 CLASSE1emme,UNI9175/FA 50.000% Maltindale rubs

Quinti®

MERIT

CATEGORY 7 500g/lin.m 76% Poliestere Recycled 24% Poliestere EN 1021-1/2 85.000 % Maltindale rubs

PREMIUM /ELEGANCE

CATEGORY 7 100% Bovine leather Primo fiore Spessore 1,2/1,4 mm EN1021-1/2

STEEL CUT TRIO

CATEGORY 7 770 g/lin.m 90% New woolworsted, 10% Nylon Classe 1, EN 1021-1/2 100.000 % Maltindale rubs

REMIX

CATEGORY 7 415 g/lin.m 90% New woolworsted, 10% Nylon Classe 1, EN 1021-1/2 100.000 % Maltindale rubs

DECONTRACTE' VELVET

CATEGORY 7 590 g/lin.m 19% CO, 61% PC,10% PL, 10%VI 40.000 % Maltindale rubs

VELVET

CATEGORY 8 600 g/lin.m 100.000 % PL Flameretardant

SOFT LEATHER CATEGORY 8 100% Bovine leather THICKNESS1,8-2 mm Primo fiore CONCIA ALL'ANILINA EN1021-1/2

Quinti®

USE AND CARE

For a proper maintenance of the products and to maintain unchanged the characteristics of the materials, we recommend to follow some very simple care instructions.

FABRICS

Cleaning: check the dedicated selection written on the color Swatch card. Usage: it is recommended to pay attention to the fabrics as they can be easily cut or ripped.

LEATHERS

Cleaning: clean with a wet white cloth with water. We recommend to use high quality products for the cleaning of the leather and to follow carefully the instructions of the manufacturer. In doubt, try out the product on a hidden part and wait at least 24 hours for the occurrence of any problems. Usage: remember that the leather is a delicate material therefore it is recommended to pay particular attention while using.

WOODS

Cleaning: clean with a soft and wet cloth with warm water. We always recommend to dry immediately after the cleaning process. All liquids or other residue must be removed in order to avoid the absorption. Usage: wooden surfaces, being a natural material, could be affected by an alteration of the color shade during time and use. We also remind that wooden surfaces cannot bear with with high temperatures if placed directly on the wooden top.

METALS

Cleaning: both steel or aluminum surfaces, and painted ones, must be cleaned with a soft and wet cloth with hot water. For the most persistent stains, a small amount of liquid soap diluted in water may be used. We always recommend to dry immediately with a soft cloth or a leather one after the cleaning process. Never using cleaning products for steel, chlorine, bleach or other strong detergents. It is not recommended to use abrasive creams, score pads and abrasive sponges that can scratch the metal surfaces. Usage: pay attention to the stains of food such as coffee, coke, fruit juices that can leave indelible marks on the surface.

WARRANTY

Quinti products are covered by 5 years warranty from the delivery date, unless normal usage and provided that materials are used following the instructions. Quinti will substitute without costs each product found not corresponding to the warranty, declining all other responsibility. The warranty doesn't include components, external accessories or materials provided by the purchaser and applied to the products in order to personalize them.